



MAGICSHINE®

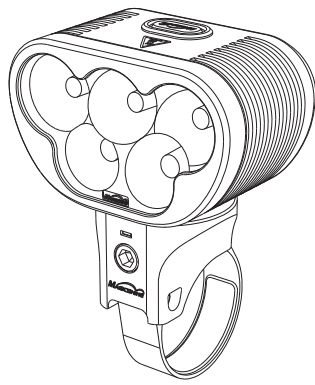

MONTEER 3500S USER MANUAL


ACCESSORY/STRUCTURE

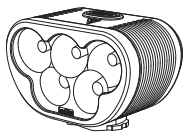


MONTEER 3500S




Handlebar mount



Battery pack



Micro USB Cable



Aero bar compatible strap




Nylon strap




3mm Hex

HOW TO INSTALL

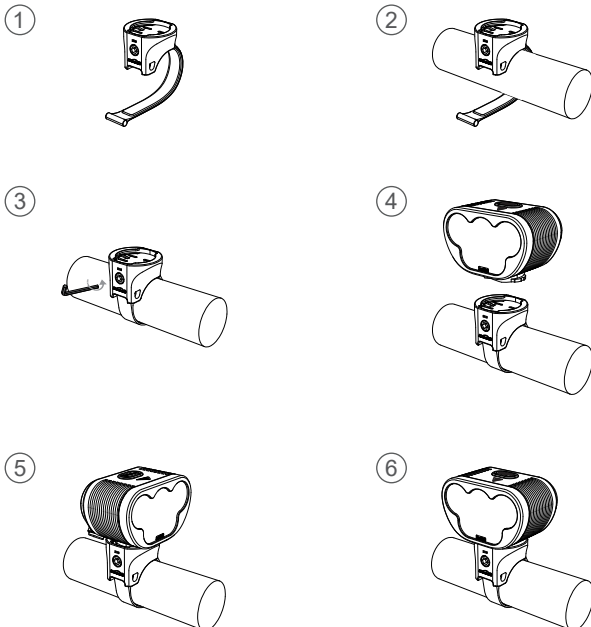

HOW TO INSTALL BATTERY PACK

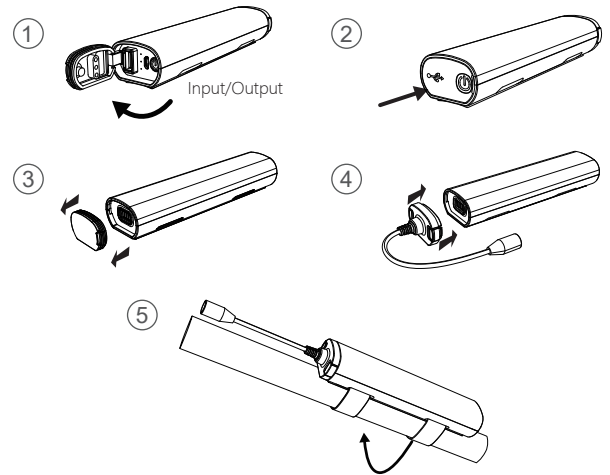

BATTERY INDICATOR

When the light is off, press the power button to display the remaining power.




FLASH RED
0%-5%





RED
6%-20%



GREEN
21%-100%



HOW TO RECHARGE

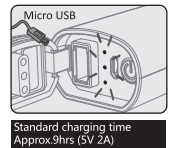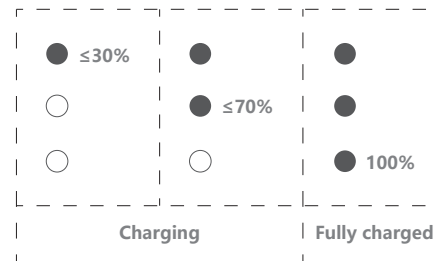


Standard charging time
Approx.9hrs (5V 2A)



SWITCHING THE LIGHTING MODE

Click power button to turn on, hold 1.5s to turn off


When you turn the light on, it lights up in the last lighting mode you used.
(Mode memory function)

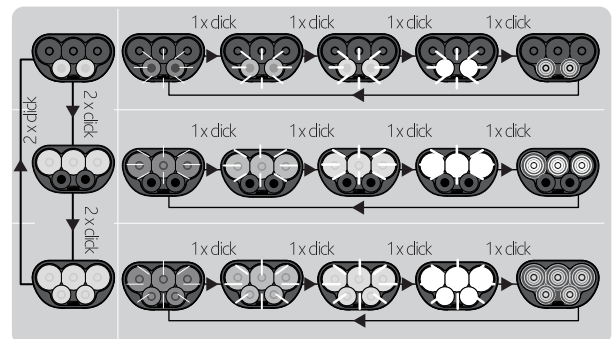


LUMENS/RUN TIME

MODE	BRIGHTNESS	ECO	LOW	MID	HIGH	FLASH
	 LUMENS	100	300	700	1400	/
	 h:min	75:00	20:00	08:00	04:30	15:30
	 LUMENS	200	600	1000	1800	/
	 h:min	19:48	08:30	04:30	02:30	09:30
	 LUMENS	350	900	1800	3500	0-1800
	 h:min	17:00	06:30	03:12	01:42	06:30

OPTIONAL PARTS

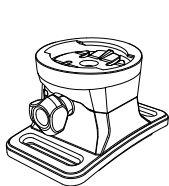

Helmet mount

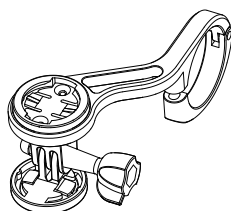

TTA front mount

*Adaptable accessories (sold separately)

⚠ WARNING



EN WARRANTY

The Magicshine lighting system is warrantied for 24 months from the date of purchase.

If you register the lighting system on the Magicshine website you will receive a bonus 6 month warranty.

Battery packs and AC adapters have a 6 month warranty, however, there is no bonus warranty available.

The warranty is limited to defects in material and workmanship on the lighting system itself, the battery pack and the AC adapter.

The warranty is only valid if the affected parts have not been tampered with and there is no intentional damage. Please keep your proof of purchase in a safe place. Proof of purchase must be presented in the event of any claim. Please contact the specialist retailer from whom you purchased the device for complaint or warranty claim.

Alternatively, you can send your complaint or claim directly to Magicshine at

Tel: (+86) 755-295 536 69

Fax: (+86)755-275 897 77

E-mail: support@magicshine.com (order from Magicshine.com online store)

[service@magicshine.com](mailto:support@magicshine.com) (order from other sales channels)

In the event of a justified warranty claim and delivery of a replacement device, you will only be entitled to a model available when replacing. The manufacturer retains the right to make technical modifications.

ANSI FL 1 STANDARD

